

Air Fryer AF-500 · User Manual v2.1

1. Safety

Read all instructions before use. Do not immerse the main unit in water. Keep 10 cm clearance behind the unit and never cover the air outlet. Surfaces get hot during use; use the handle only.

2. Before first use

Remove all packaging including the protective film on the display. Wash the basket and crisper plate in warm soapy water. Run the unit empty for 5 minutes at 200 °C to burn off the protective coating; a light odour is normal.

3. Cooking

Preheat for 3 minutes for best results. Do not overfill - one layer with space between pieces. Shake or turn halfway through. The basket must be fully seated for the heating element to run.

4. Maintenance

4.1 Basket and plate are dishwasher safe on the top rack. 4.2 Wipe the interior with a damp cloth after each use. 4.3 Clean the filter every 3-4 uses or when the panel light turns amber: pull the tray, rinse under warm water, dry fully before refitting. 4.4 Descale the heating element every three months following the guide on the product page.

5. Troubleshooting

Unit does not switch on: check the plug and that the basket is pushed in. Error light flashes twice: basket not seated. Four flashes (E4): overheating - unplug, wait 10 minutes and clean the filter.

6. Specifications

Capacity 5 L · Power 1,700 W · 220-240 V · Temperature 40-200 °C · Dimensions 27 x 30 x 35 cm · Weight 4.6 kg · Wi-Fi 2.4 GHz.