

Norra

Air Fryer AF-500 · Quick-start guide

Get cooking in five steps

1. Unbox and remove the display film. 2. Wash basket and plate. 3. Place with 10 cm clearance and plug in. 4. Run empty for 5 minutes at 200 °C. 5. Choose a preset - try FRIES.